



SPECIFICATIONS

To wire the actuator to the rocker switch for double action (extension/retraction) and to the dc speed controller make the following connection:

| ROCKER SWITCH TERMINAL | CONNECTION TO |
|------------------------|-------------------------------|
| T1 | Battery Positive Terminal (+) |
| T2 | Actuator Terminal 1 (Black) |
| T3 | Battery Negative Terminal (-) |
| T4 | Battery Negative Terminal (-) |
| T5 | Actuator Terminal 2 (Red) |
| T6 | Battery Positive Terminal (+) |

