



SPECIFICATIONS

To wire the actuator to the rocker switch for double action (extension/retraction) and to the dc speed controller make the following connection:

ROCKER SWITCH TERMINAL	CONNECTION TO
T1	Battery Positive Terminal (+)
T2	Actuator Terminal 1 (Black)
T3	Battery Negative Terminal (-)
T4	Battery Negative Terminal (-)
T5	Actuator Terminal 2 (Red)
T6	Battery Positive Terminal (+)

